

Manual - 433 2 Button

Transmitter
Solutions

*Firefly*TM

TRANSMITTER



*Thank you for choosing a Transmitter Solutions product.
Please read this manual carefully before using the product.*

Made in China. Copyright © 2007 by Transmitter Solutions.

CONTENTS

1 - TRANSMITTER OVERVIEW

- 1A - General information
- 1B - Technical specifications
- 1C - Main components

2 - CODING

3 - OPERATION

4 - BATTERY ACCESS

5 - TROUBLESHOOTING

1A - General information


The Transmitter Solutions - FireflyTM Transmitter is a very small (1/2" x 1-7/8" x 1-1/2") key chain style wireless transmitter operating at 433 MHz. The FireflyTM achieves its small size by using state-of-the-art, surface mount components. It has been designed for use with and is compatible with all dip switch receivers operating at a 433 frequency, including all Transmitter Solutions dip switch digital receivers.

The A23 battery has a shelf life of about 1 year. The product fully complies with Part 15 of the FCC Regulations.

1B - Technical Specifications

Operating frequency	433 MHz
Number of buttons	2
Battery:	1 ea. 12V A23
Number combinations:	1024
Operating temperature:	-20°F - 100°F
Overall dimensions:	1/2" x 1-7/8" x 1-1/2"
Weight:	1 oz.

1C - Main components

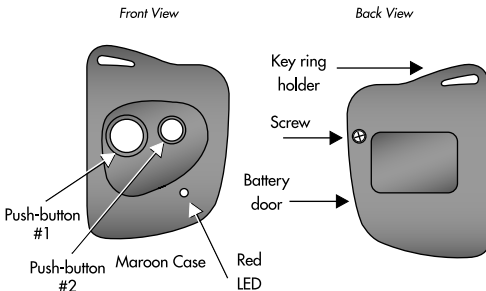

2 - CODING


 
Set each of the ten-digit toggle code switches to match each code set in the receiver. Access to the Firefly™ toggle code switch is achieved by removal of the back cover and battery (if necessary). Move switches using a small pointed object, such as a paper clip, gently switching the small switches to either the ON or OFF position. (In Detail below, top switches 2, 4 and 7 are in the ON position.) When complete, reinstall battery and replace back cover, inserting bottom clip into front groove (see detail), then replace and tighten screw. Button #1 (large button) is set with the dip switches labeled 1, and button #2 (small button) is set with the dip switches labeled 2.

3- OPERATION

Once the codes are set to match the receiver codes, you may test the system. Ensure the gate or door is visible and clear before testing.

Step 1. Push each Firefly™ button from a distance of about ten feet. If the receiver activates, the switches are properly matched.

Step 2. Test the transmitter from several locations to discover any "blind spots" caused by interference.

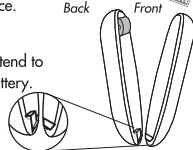

4 - BATTERY ACCESS

Remove set screw and open case from back. Attend to proper polarity when installing or replacing battery. See "coding" for proper removal and replacement of back cover.

5 - TROUBLESHOOTING

PROBLEM	SOLUTION
The system does not receive the transmitter signal. The transmitter LED will not light.	Ensure clear plastic battery insulator has been removed; OR Replace the transmitter battery.
The system does not receive the transmitter signal. The transmitter LED is ON.	Check to ensure the transmitter switches are coded to match your system receiver.
The operating range is reduced.	Replace the transmitter battery.

Firefly™ - Type : 433TSD22K

FCC ID : SU7433TSD22K

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept interference received, including interference that may cause undesired operation.

Notice

Any changes or modifications to equipment not expressly approved could void the manufacturer's warranty and could void the user's authority to operate the equipment.

WARRANTY

The warranty period of Firefly™ transmitters is 24 months, beginning from the manufacturing date of the transmitter. During this period, if the product does not operate correctly, due to a defective component, the product will be repaired or replaced. The warranty does not extend to the transmitter case, or to battery life.

Transmitter 
SOLUTIONS®

7380 S. Eastern Avenue, Suite 124-320 • Las Vegas, NV 89123
(866) 975-0101 * (866) 975-0404 Fax
www.transmittersolutions.com