



Overview

The Intercom allows multiple simultaneous conversations, using a 900 Mhz secure digital radio link. The intercoms form an exclusive network and respond only to other intercoms in the network.

Carton Inventory

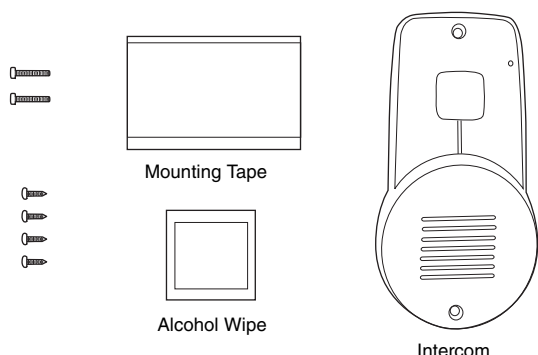

Operation & Features

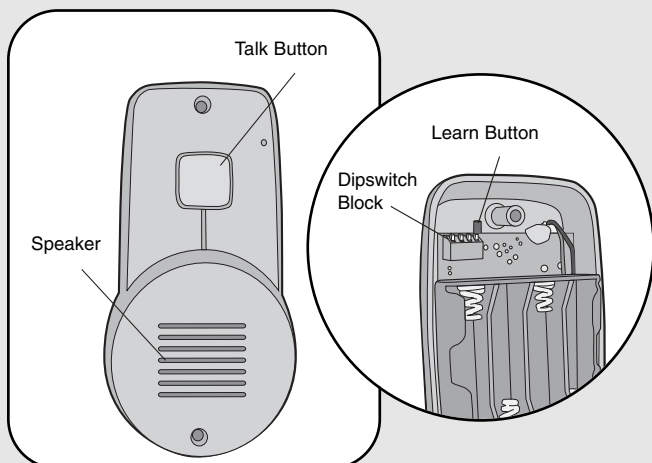

Talk Button: To talk, hold down the Talk button and all intercoms in the network will receive the signal. When holding down the Talk button on a different intercom, a secure channel is created and the other intercoms in the network do not hear the conversation.

Battery: The AA Alkaline batteries (not provided) will last up to a year depending on use (Lithium batteries recommended for colder environments). When batteries are low intercom will emit two beeps every ten minutes.

Call Mode: In Call Mode the intercom may only be used to call the intercom network and will not be able to hear conversation from within the network.

To put intercom into Call Mode turn Dipswitch #1 OFF.



Volume: To increase the intercom volume, set Dipswitch #4 to OFF.



Sensitivity: To increase sensitivity on the intercom set Dipswitch #3 to OFF.




Activating Gate Control Unit (GCU): When answering a call from the Gate Access Panel (GAPLM) or DAILM, the GCU can be activated by tapping the Call button on the Intercom three times within 3 seconds. The Intercom will beep in response.

Installation

The Intercom can be mounted by using the included screws or by using the double-sided mounting tape. It is recommended to use the mounting tape on surfaces such as metal or glass.


Mounting with Screws

Step 1

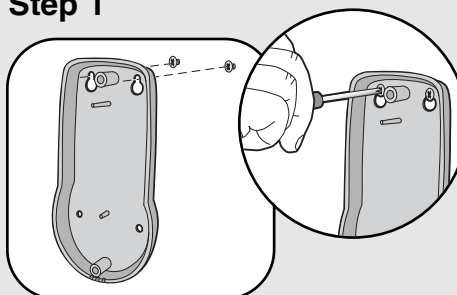

Mount Intercom with small silver screws. Screw the top two screws halfway into the mounting surface. Place back of intercom over screws. Tighten screws.


Step 2

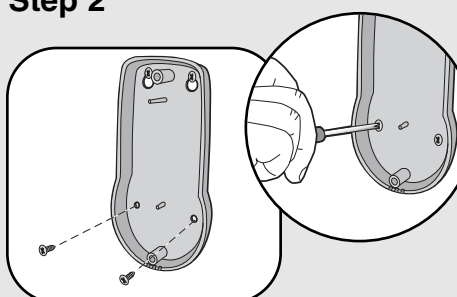

Put the remaining silver screws into the bottom holes of intercom. Tighten screws.


Mounting with Tape

Step 1

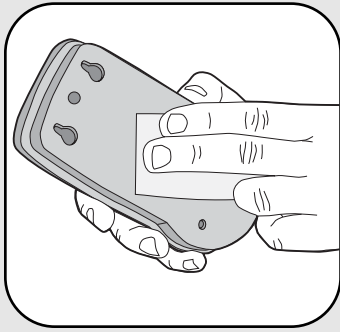


Clean back of intercom and mounting surface using the alcohol wipe.

Step 2

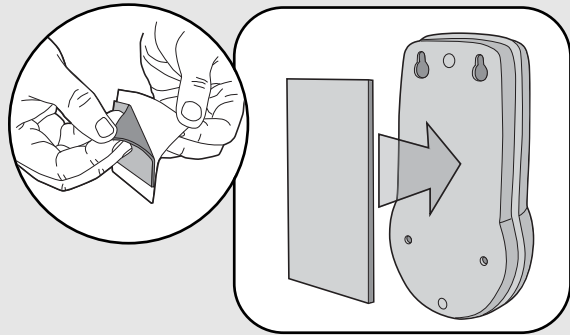

Peel off white paper from mounting tape. Firmly press mounting tape on back of intercom.


Step 3

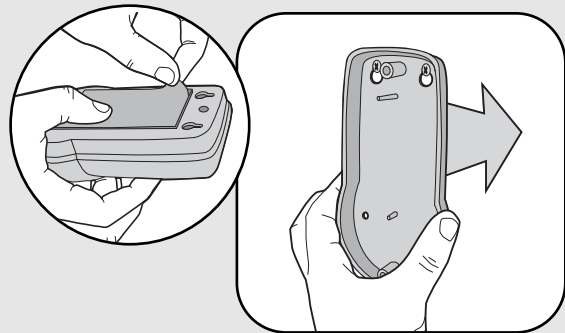

Peel paper from mounting tape. Firmly press intercom onto mounting surface.

Assemble & Program


Step 1

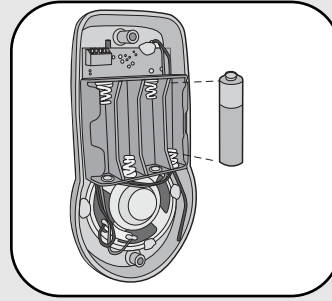

Install 4 AA Alkaline batteries (not provided). (Lithium batteries recommended for colder environments.) Batteries should last one year depending on use.


The intercom must be programmed to at least one other intercom to become a network or it can be programmed into an existing network. The Outdoor Intercom is compatible with the Portable Intercom and the Flush Mount Intercom.

Create New Network

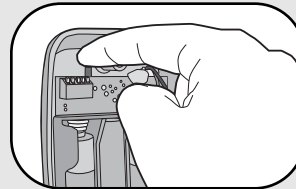

Press and release the Learn button on the intercom. Within 5 seconds press and release the Learn button on intercom that is to be programmed into the network. Repeat for any additional intercoms.


Add to an Existing Network

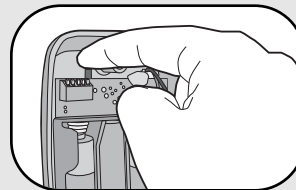

Press and release the Learn button on the new intercom. Within 5 seconds press and release the Learn button on one of the intercoms in the network.


NOTE: Do not program new intercoms to each other before adding them to the network or they will form a separate network and the memory will need to be cleared. (See Troubleshooting to clear memory.) If adding to Flush Mount Intercom, hold down both buttons until channel lights flash, then release.

Step 2

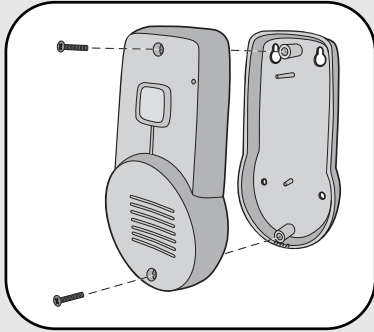

Secure cover with the two large black screws.

Mounting Template

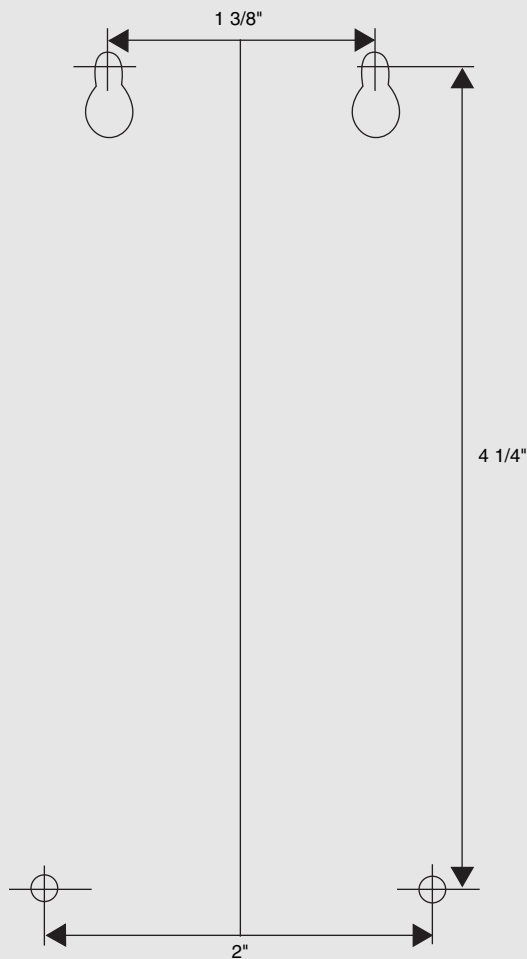

Troubleshooting

Intercom does not function.

Check batteries in Intercom. When the Talk button is pressed a tone should be heard.

Ensure Intercom is connected to a network.

See *Assemble & Program*.

Intercom is not getting expected transmission range.

Keep Intercom away from trees, metal objects and electrical wiring. Do not mount intercom on a tree, masonry, or metal surface.

Intercom beeps every ten minutes.

The battery is low in the intercom. Replace with AA Alkaline batteries.

Need to clear intercom's memory.

Press and hold Learn button, an initial beep will be heard. Continue to hold until a second beep is heard (about 15 seconds). Ensure other intercoms are not activated during this time. Intercoms in the network that are on will signal during the clearing process. Once memory is clear the intercom can be programmed to a new network.

FOR TECHNICAL SUPPORT DIAL OUR TOLL FREE NUMBER:

1-800-528-2806

www.liftmaster.com

NOTICE: To comply with FCC and or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.
Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.